


## Active Noise Control Unit Removal/Installation

1. Remove the audio-HVAC display module.

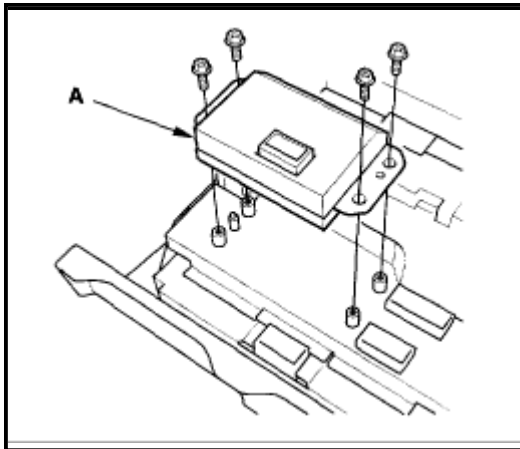


Zoom

Sized for Print

2. Remove the screws and the active noise control unit (A).
3. Install in the reverse order of removal.

# 109. Behind Audio Unit

Location Photos 101-125

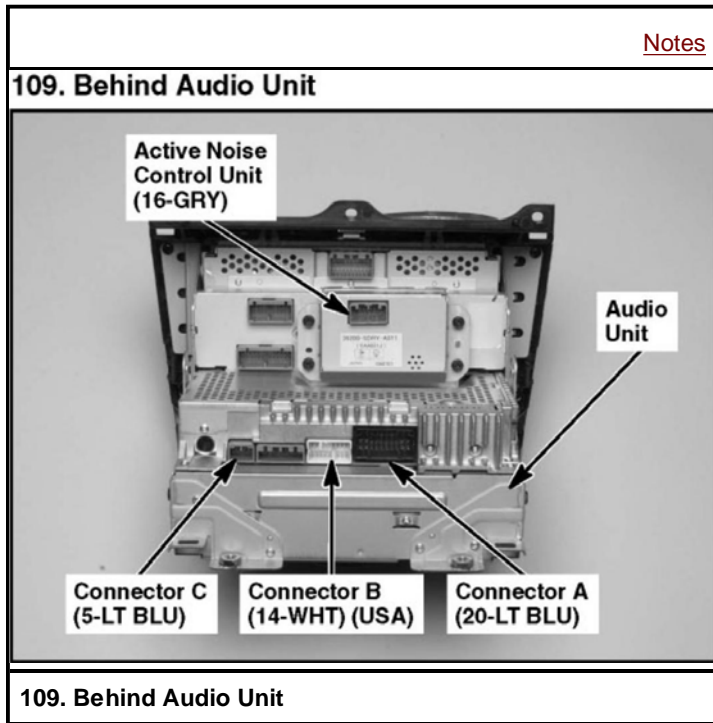

Zoom

## Audio-HVAC Display Module Removal/Installation


### Audio-HVAC Display Module Removal/Installation

SRS components are located in this area. Review the SRS component locations and the precautions and procedures before performing repairs or service.

#### NOTE:


- Put on gloves to protect your hands.
- Take care not to scratch the dashboard and related parts.
- Lay a shop towel under the parts when working on them to protect the face panel from scratches or other damage.
- Do not work in a dusty or dirty place.
- Discharge static electricity from your body before and during the work.
- Do not touch the circuit board with your bare hands.
- Do not work with dirty hands.
- Be careful not to fold the flat plate cable.
- Do not touch the terminal connector of the flat plate cable with your bare hands. (If you have touched it, wipe it off thoroughly.)


1. Make sure you have the anti-theft codes for the radio and navigation system, then write down the audio presets.
2. Remove the upper panel.
3. Remove the center pocket.
4. With navigation: Remove the navigation control unit.

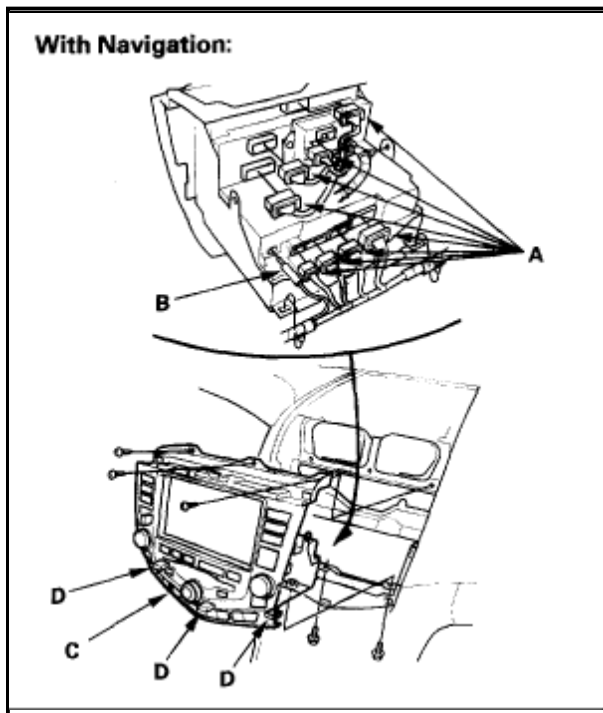

Zoom

Sized for Print

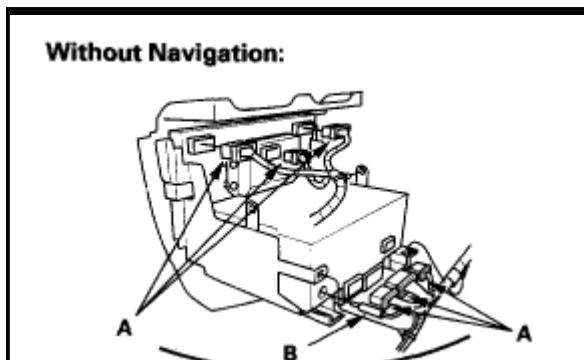

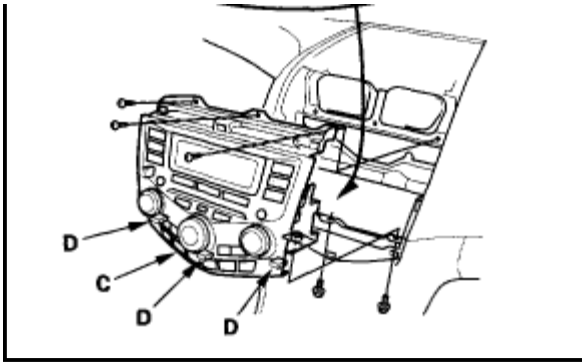


Zoom

Sized for Print

5. Remove the screws and bolts, disconnect the audio-HVAC display module connectors (A) and the antenna lead (B), then remove the audio-HVAC display module (C) by releasing the three clips (D).
6. Install the audio-HVAC display module and note these items:
  - Make sure the disconnected connectors are plugged in properly, and the antenna lead is connected properly.
  - Enter the anti-theft code for the radio, then enter the customer's audio presets.

### Component Location Index

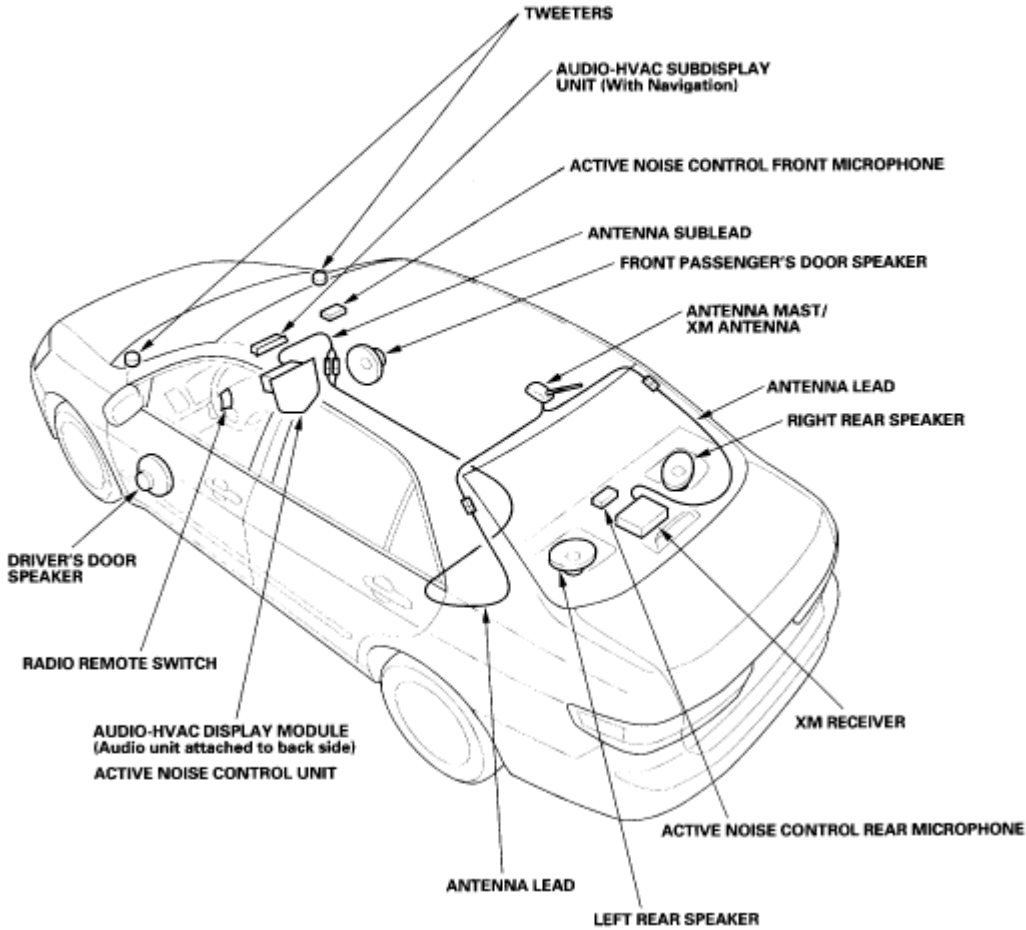

Audio, Navigation And Telematics - Component Location Index

Zoom


## Upper Panel

### Upper Panel Removal/Installation

#### Special Tools Required

Upper panel/vent removal tool 07AAC-SDAA100

**NOTE:** Take care not to scratch the dashboard and related parts.

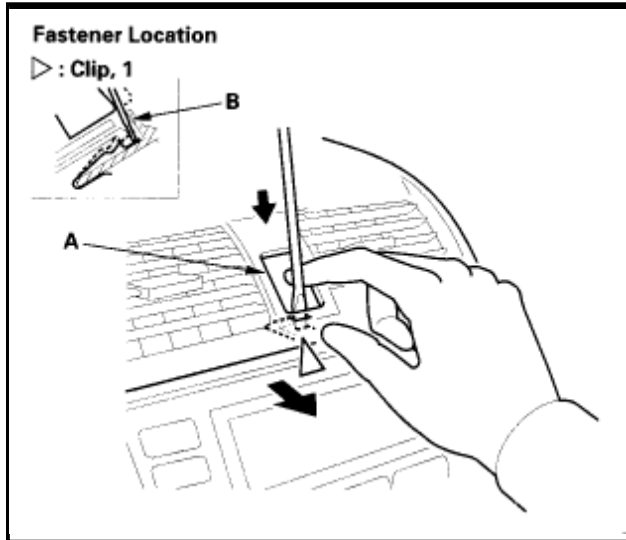


Zoom

Sized for Print

1. Push the hazard warning switch button (A). Carefully insert a flat-tip screwdriver into the slot (B) below the button, and push down on the center clip.

#### With the special tool and a flat-tip screwdriver

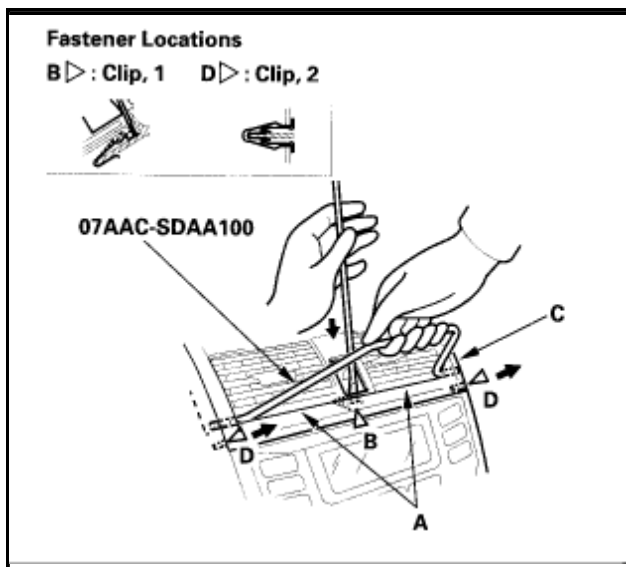


Zoom

Sized for Print

2. Set both ends of the special tool in the center vent openings (A) as shown. While pressing the center clip (B) down, pull the upper panel (C) back with the tool to detach the clips (D).


#### With two flat-tip screwdrivers

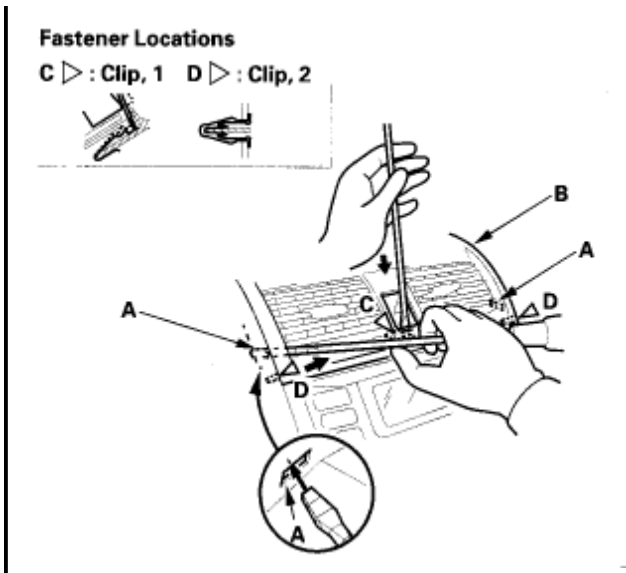

Zoom

Sized for Print

- Carefully insert a flat-tip screwdriver wrapped with tape into the slot (A) on one side of the upper panel (B). While pressing down on the center clip (C), carefully pull out on the side of the panel to detach the clips (D). Repeat this operation on the other side of the panel.

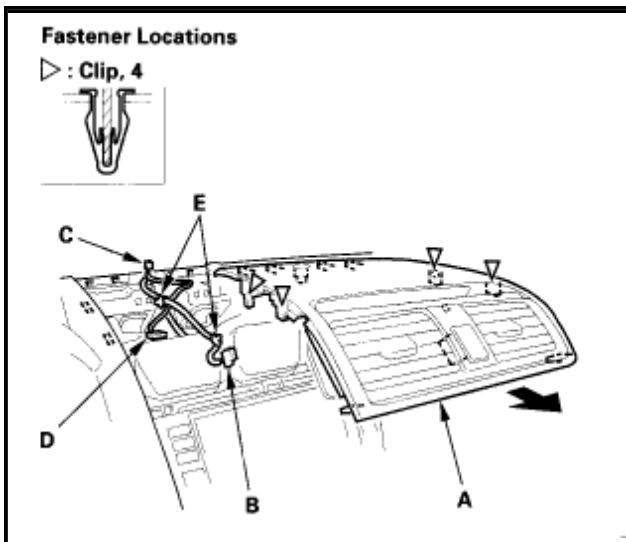

Zoom

Sized for Print

- Pull the upper panel (A) in the direction shown to release the remaining clips, disconnect the hazard warning switch connector (B), sunlight sensor connector (C) and navigation subdisplay connector (D). Detach the harness clips (E), then remove the upper panel.
- Install the panel in the reverse order of removal, and make sure each connector is plugged in properly.

## Without Navigation System

### Center Pocket Removal/Installation


#### Without Navigation System

SRS components are located in this area. Review the SRS component locations and the precautions and procedures before performing repairs or service.

#### NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the dashboard and related parts.

1. Remove the center holder.

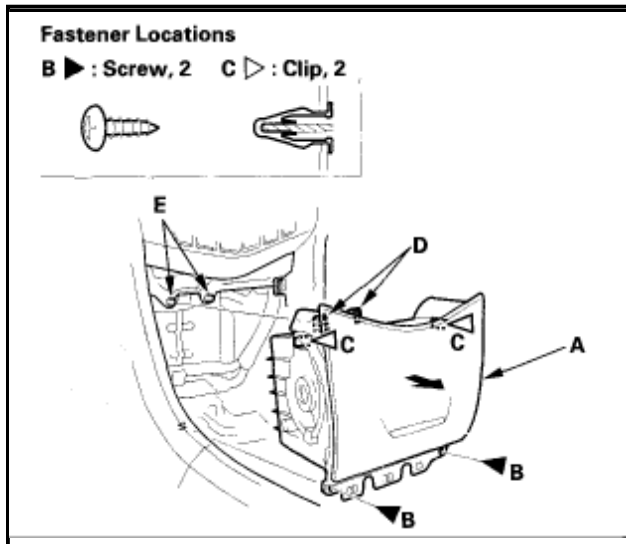

Zoom

Sized for Print

2. Remove the center pocket (A).

1. Remove the screws (B).
2. Open the lid, then pull the pocket back by hand to detach the clips (C).
3. Close the lid, then remove the pocket.

3. Install the pocket in the reverse order of removal, and note these items:

- Make sure the holders (D) are installed onto the pins (E) properly.
- Push the clipped portions into place securely.
- Make sure the center pocket lid opens smoothly.



## With Navigation System

### Center Pocket Removal/Installation


#### With Navigation System

SRS components are located in this area. Review the SRS component locations and the precautions and procedures before performing repairs or service.

#### NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the dashboard and related parts.

1. Remove the center holder.

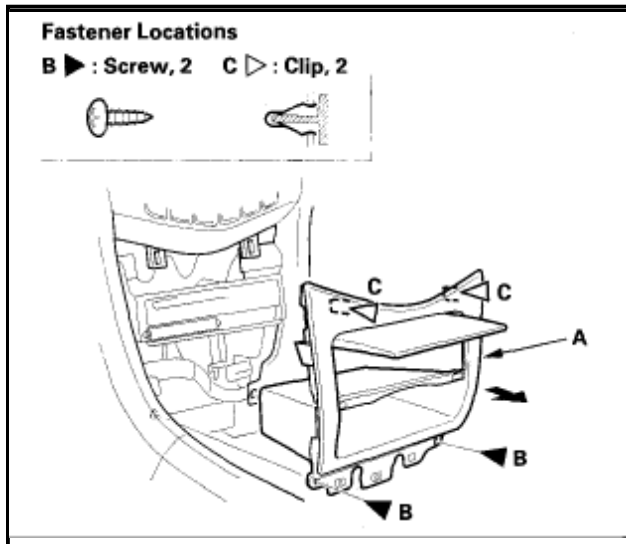

2. Remove the center pocket (A).

1. Remove the screws (B).
2. Open the lid, then pull the pocket back by hand to detach the clips (C).
3. Install the pocket in the reverse order of removal, and note these items:
  - Push the clipped portions into place securely.
  - Make sure the center pocket lid opens smoothly.