


Fuses

INTERIOR FUSE BOX

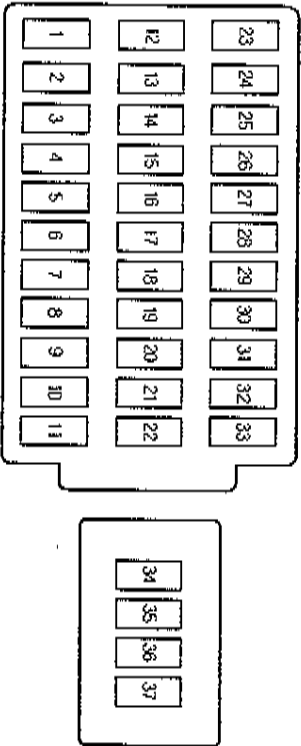

No.	Amps.	Circuits Protected
1	15 A	Drive by Wire
2	15 A	Ignition Coil
3*	10 A	Day Light
4	15 A	Laf Heater
5	10 A	Radio
6	7.5 A	Interior Light
7	10 A	Back-Up Lights
8	20 A	Door Lock
9	15 A	Front Accessory Sockets

No.	Amps.	Circuits Protected
10	7.5 A	IG OPDS
11	30 A	IG Wiper
12	--	Not Used
13	--	Not Used
14	20 A	Driver's Power Seat (Slide)
15	20 A	Heated Seat
16	20 A	Driver's Power Seat (Recline)

No.	Amps.	Circuits Protected
17	--	Not Used
18	15 A	IG ACC
19	15 A	IG Fuel Pump
20	7.5 A	IG Washer
21	7.5 A	IG Meter
22	10 A	IG SRS
23	7.5 A	IGP
24	20 A	Power Window (Left Rear)
25	20 A	Power Window (Right Rear)
26	20 A	Power Window (Passenger)
27	20 A	Power Window (Driver)
28	--	Not Used
29	7.5 A	Hybrid HAC
30	7.5 A	IG HAC
31	--	Not Used
32	7.5 A	ACC
33	--	Not Used
34	20 A	Rear Accessory Socket
35	7.5 A	STS
36	15 A	ACM
37	10 A	JMA

* : On Canadian model

The dia
you the
your ve
identifi
include
know al
emission